

# Mommy I'm Here CHILD LOCATOR

## **BATTERY REPLACEMENT:**

- Use a screwdriver to loosen the screws on the back of the Transmitter (TX) & Receiver (RX) and then remove the battery cover.
- Follow the marked battery polarities to install 2 CR2032 Lithium batteries (included) for the Receiver and 1 12V battery (included) for the Transmitter.
- Replace battery covers for each component.

## **OPERATION:**

- Turn on the Teddy Bear Receiver (RX) unit. Illumination of the RED LIGHT indicates that the RX has recognized Transmitter (TX) unit's code and is ready to operate with it.
- Press the button on the TX. You will hear 3 beeping signals. After this, the beeping sound will stop. This indicates that the TX has successfully connected with the RX.
- Once the connection between the two units is active, use the back clip to attach the RX to your child's shoes while keeping the TX on your person. To use the device and locate your child, press the TX and the receiver will continuously sound one long and four short beeps for 5 seconds to help you locate the position of your child. . The effective distance (above 100 feet) may vary from place to place depending on the environment.
- After turning on the RX, if the LED light flashes every 20 seconds and gives out a beep sound, it is indicating the battery power is poor. At this point the batteries should be replaced.

## **NOTE:**

- Always turn the RX to the off position when not in use.

