


# Removal Instructions

## Double Hung, Casement, and Sliding Windows


\*Installer: Leave instructions behind for the occupant.

- Remove window guard only in case of an emergency or if conducting a test on release mechanisms.
- Release mechanism and releasable window guard should be tested once a month to ensure proper operation.
- All household members 6 years and older should know how to operate the release mechanism in case of an emergency.
- Window guard must be re-installed into window frame after removing (see directions below). Be sure to check that it is securely locked into both posts.

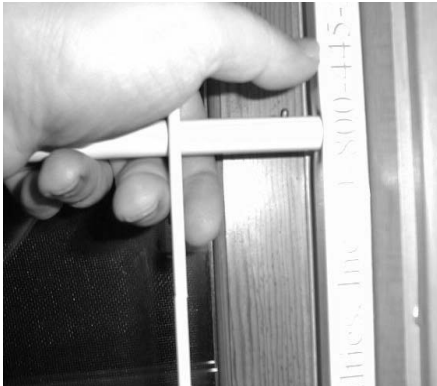

### Step 1

Locate all emergency release buttons indicated by silver-colored labels.

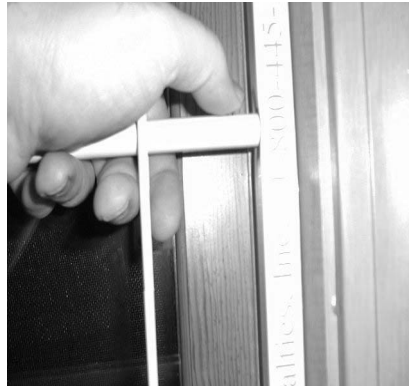

### Step 2

**Two-button model:**

press and hold down buttons.

**Four-button model (double hung):**  
press both buttons on one end at the same time and hold down.

**Four-button model (casement/sliding):**  
press both buttons on top of guard at the same time and hold down.



### Step 3

While holding down the buttons, slide the tubes towards the center of the window.



### Step 4

**Two-button model:** release buttons.

**Four-button model (double hung):** release buttons & repeat steps 2 & 3.

**Four-button model (casement/sliding):** release buttons & repeat steps 2 & 3 with bottom buttons.



### Step 5

Bars should now be dislodged from posts. Remove guard from window.

**To Re-install:** Hold bars so that silver-colored emergency release labels are facing you. Place bars into the holes of one of the posts while pressing emergency release button(s) on that end. Press emergency release button(s) on remaining end and slide bars into the holes. (If the bars do not fit into the holes, you may be putting the wrong end into the post). Pull on unit to be sure it is locked into both posts securely.